

# CAVITY WALL WEEP VENT INSTALLATION ADVICE

Designed for cavity ventilation and discharging water from external walls



Manufactured to BS EN ISO 9001 and BS EN ISO 14001



Meets all relevant British standards



Satisfies all NHBC requirements



Complies with all relevant Building Regulations

1.

Wall weep vents should be used wherever water could collect inside a cavity wall, such as over external lintels, or wherever a cavity tray system is installed.

2.

To work effectively wall weep vents should be placed directly on top of the base of a cavity tray or DPC, or on the front flange of the lintel.

3.

Wall weep vents should be spaced at 450mm centres to comply with NHBC recommendations.

4.

Care should be taken to ensure the wall weep vent is kept clear of mortar and does not become blocked. This is particularly important at the back of the weep vent which could be blocked by mortar droppings from above.

Scan or click to view the product datasheet

