


INSTALLATION ADVICE

Products allowing a complete horizontal
cavity tray system to be formed

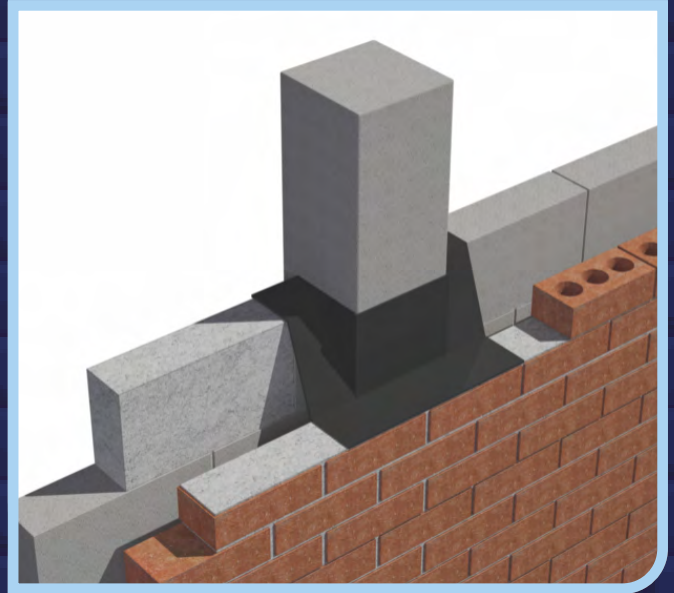

-  Satisfies all NHBC requirements
-  Manufactured to BS EN ISO 9001 and BS EN ISO 14001
-  Complies with all relevant Building Regulations
-  Meets all relevant British Standard

1.

As with the DPC, accessories should always be bedded on to fresh mortar, never dry bedded. The masonry laid over the DPC should also be bedded on to fresh mortar so that the DPC is approximately half way through the thickness of the mortar joint.

2.

DPC must be lapped on to the accessory by a minimum of 100mm.

3.

All lapped joints must be fully sealed with jointing tape.

4.

It is essential that the jointing surfaces are clean and dry or the jointing tape will not seal correctly.

Scan or click to view the
product datasheet

